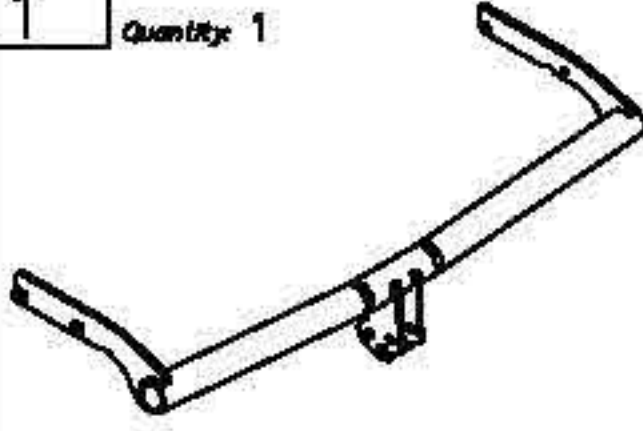
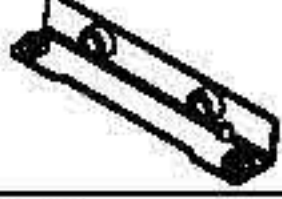
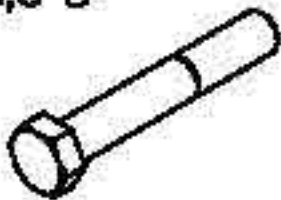
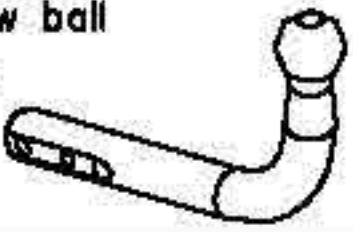
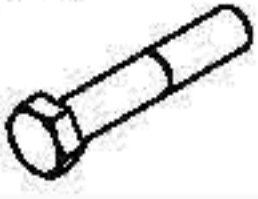
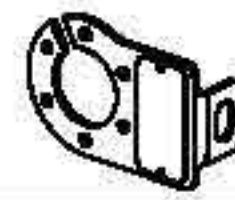


Towbar accessories:

Pos. 1 Name: Main bar Quantity: 1 	Pos. 5 Name: Left fish-plate Quantity: 1 	Pos. 10 Name: Nut 8 B Quantity: 2 Dim.: M12 
	Pos. 6 Name: Bolt 8,8 B Quantity: 1 Dim.: M12x75mm 	Pos. 11 Name: Plain washer Quantity: 2 Dim.: Ø 13 mm 
Pos. 2 Name: Tow ball Quantity: 1 	Pos. 7 Name: Bolt 8,8 B Quantity: 1 Dim.: M12x70mm 	Pos. 12 Name: Plain washer Quantity: 8 Dim.: Ø 10,5 mm 
Pos. 3 Name: Socket plate Quantity: 1 	Pos. 8 Name: Bolt 8,8 B Quantity: 4 Dim.: M10x45mm 	Pos. 13 Name: Spring washer Quantity: 2 Dim.: Ø 12,2 mm 
Pos. 4 Name: Right fish-plate Quantity: 1 	Pos. 9 Name: Bolt 8,8 B Quantity: 4 Dim.: M10x25mm 	Pos. 14 Name: Spring washer Quantity: 8 Dim.: Ø 10,2 mm 
		Pos. 15 Name: Ball cover Quantity: 1 

Towing hitch (without electrical set)

Class: A50-X Cat. no. V65

Designed for:

Manufacturer: NISSAN

Model: NOTE

produced since 2006 till 10.2013

Technical data:

D-value: 6,9 kN

maximum trailer weight: 1200 kg

maximum vertical cup load: 50 kg

Approval number acc. to regulations EKG/ONZ 55.01: E20-55R-01

Foreword

This towbar is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch.

The vehicle manufacturer's specifications regarding trailer load and max. vertical cup load are decisive for driving whereat values for the towing hitch cannot be exceeded.

D-value formula:

$$\frac{\text{Max trailer weight [kg]} \times \text{Max vehicle weight [kg]}}{\text{Max trailer weight [kg]} + \text{Max vehicle weight [kg]}} \times \frac{9,81}{1000} = D \text{ [kN]}$$

FITTING INSTRUCTION

Clamp mark in acc. with		Cables joining
ISO	PN	
1	L	Left directional lights
2	+	Rear fog lights
3	31	Ground
4	R	Right directional lights
5	58R	Right side parking lights
6	54	Stoplights
7	58L	Left side parking lights

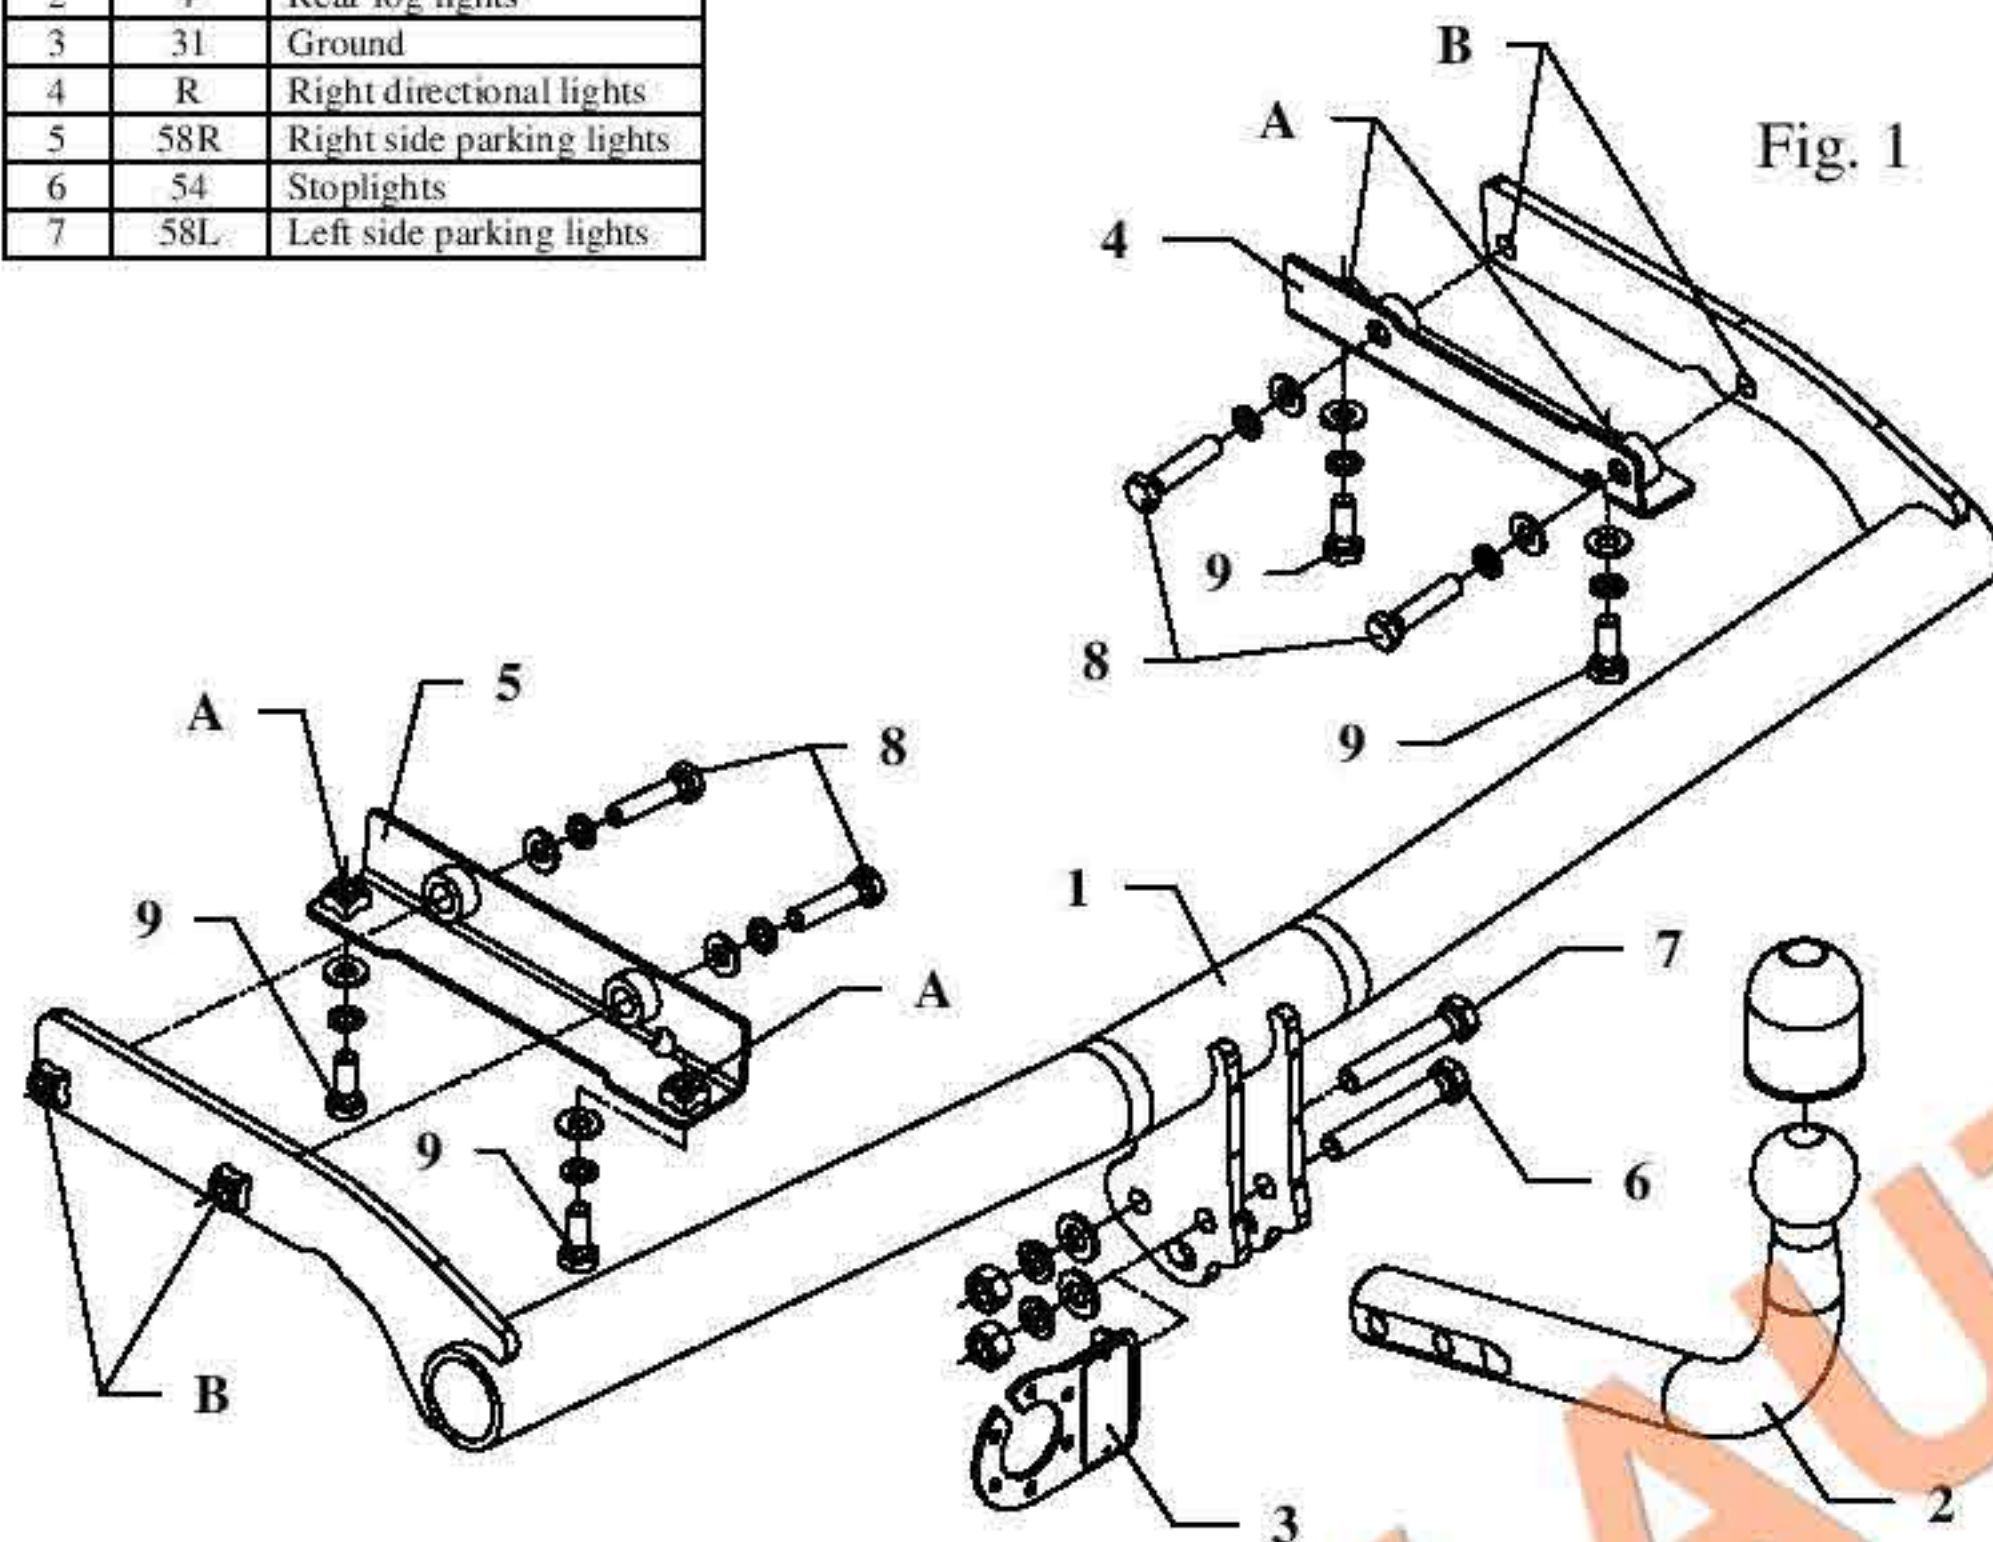


Fig. 1

This towbar is designed to assembly in following car: **NISSAN NOTE**, produced since 2006 till 10.2013, catalogue no. **V65** and is prepared to tow trailers max total weight **1200 kg** and max vertical load **50 kg**.

From manufacturer

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towbar depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

The towbar should be install in points described by a car producer.

INSTRUCTIUNI MONTAJ

1. Demontați bara de protecție din spate.
2. Demontați suporturile barei de protecție pe partea stângă și dreapta (nu mai este folosit).
3. Pune peste plăci pune (poz. 4 și 5), în acest fel, astfel încât găurile din peste sau plăci de acord cu găuri originale, pregătite de un producător auto. Peste-plăci fixati vag la punctele (poz. A) folosind șuruburile M10x25mm (poz. 9) de la accesorii pentru bară de tractare.
4. Pune bara principal al barei de remorcare (poz. 1) la cadrul șasiului. Remediați cu șuruburi M10x45mm (poz. 8) prin găurile (poz. B), așa cum se arată în figura 1.
5. Decupați armătura fragment a barei de protecție în conformitate cu figura 2.

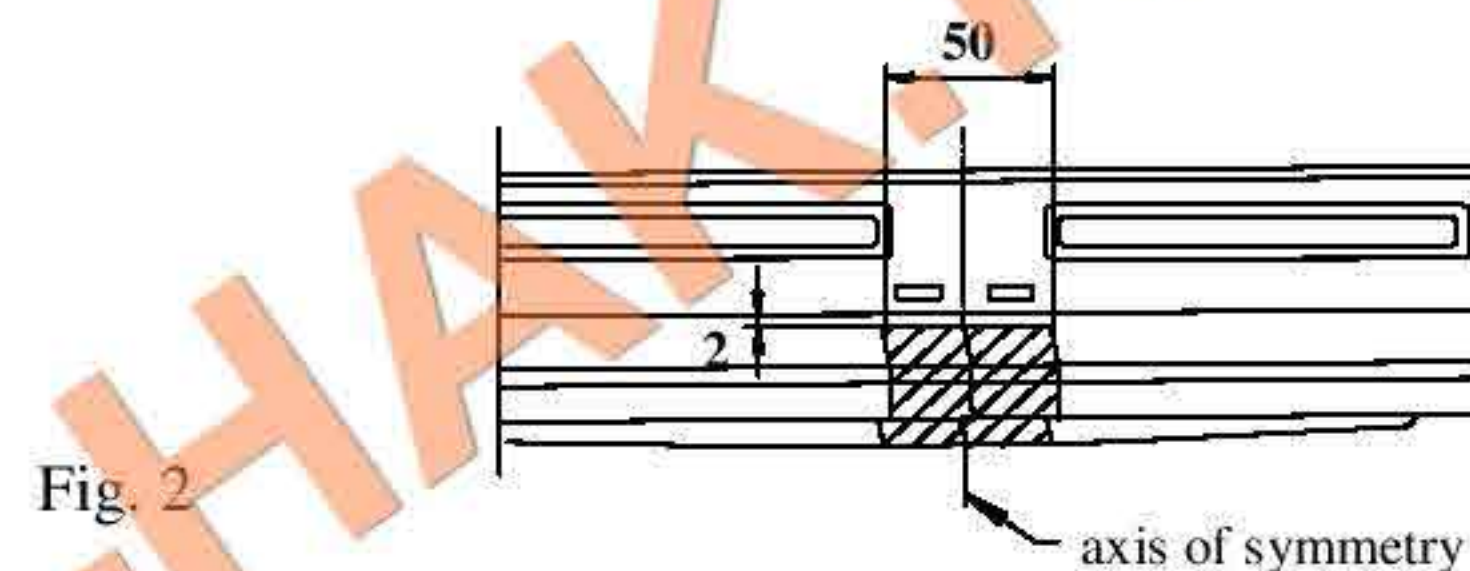


Fig. 2

6. Montați din nou bara de protecție după ce tăiați fragmentul său (dedesubt, în axa de simetrie) - latime 50mm și 70mm adancime.
7. Fixați cuplajul sferic (poz. 2), folosind șurubul M12x75mm (poz. 6) și M12x70mm (poz. 7). Cu șurubul M12x75mm fixați, de asemenea, o placă de soclu (poz. 3). A se vedea figura 1.
8. Strângeți toate șuruburile conform cuplului indicat în tabel.
9. Conectați cablurile electrice de la priză cu 7 poli de conformitate cu instrucția mașină. (Recomandat montajul la o stația de service autorizata).

Torque settings for nuts and bolts (8,8):

M 8 - 25 Nm	M 10 - 55 Nm
M 12 - 85 Nm	M 14 - 135 Nm

NOTE

After install the towbar you should get adequate note in registration book (at authorised service station).The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km of exploitation check all bolts and nuts. The ball of towbar must be always kept clear and conserve with a grease.