
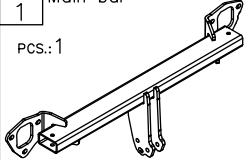












Towing hitch accessories:

Pos. 1	Main bar PCS.: 1	Pos. 6	Fish-plate PCS.: 2	Pos. 12	Bolt 8,8 B M12x75mm PCS.: 1	Pos. 18	Nut 8 B M10 PCS.: 6
							
		Pos. 7	Jib with the nut M10 PCS.: 2	Pos. 13	Bolt 8,8 B M12x70mm PCS.: 1	Pos. 19	Plain washer ø12mm PCS.: 2
							
Pos. 2	Tow ball PCS.: 1	Pos. 8	Distance sleeve ø21.3x2.65mm L=30mm PCS.: 2	Pos. 14	Bolt 8,8 B M10x80 PCS.: 2	Pos. 20	Plain washer ø10mm PCS.: 12
							
Pos. 3	Socket plate PCS.: 1	Pos. 9	Distance sleeve ø25xø4mm L=6mm PCS.: 2	Pos. 15	Bolt 8,8 B M10x35mm PCS.: 8	Pos. 21	Spring washer ø12mm PCS.: 2
							
Pos. 4	Right bracket PCS.: 1	Pos. 10	Distance sleeve ø17x2.65mm L=10mm PCS.: 2	Pos. 16	Bolt 8,8 B M10x25mm PCS.: 2	Pos. 22	Spring washer ø10mm PCS.: 12
							
Pos. 5	Left bracket PCS.: 1	Pos. 11	Angle fish-plate PCS.: 2	Pos. 17	Nut 8 B M12 PCS.: 2	Pos. 23	Ball cover PCS.: 1
							



Tel: +40 745.805.990 / +40 737.122.471
 Email: autogedal@gmail.com
 office@auto-hak.ro
 Web Page: www.auto-hak.ro

Carlig remorcare Subaru Forester 2008-2012 semidemontabil Auto-Hak

Class: **A50-X** Cat. no. **SU45**

Designed for:

Manufacturer: **SUBARU**

Model: **FORESTER**

produced since 2008 till 12.2012

Technical data:

D-value: 10,0 kN

maximum trailer weight: **2000 kg**

maximum vertical cup mass: **80 kg**


Approval number according to Directive 94/20/EC: e20*94/20*0698*00

Acesta bara de tractare este proiectata în conformitate cu normele de siguranță ale regulilor de circulație. Carligul de tractare este o componentă de siguranță și poate fi instalata numai de personal calificat. Orice modificare sau transformare facuta asupra cârligului de remorcare este interzisă și va duce la anularea certificării produsului. Indepartați materialul izolator de sub vehicul (dacă există) in zona de montare a ansamblului. Specificatiile de produs ale autovehiculului referitor la greutatea admisa pe vehicul, sunt extrem de importante. In acelasi timp, sarcina admisa pentru cârligul de remorcare nu poate fi depășită si poate fi calculata folosind relatia:

$$\frac{\text{Masa maxima a remorcii [kg]} \times \text{Masa maxima a masinii[kg]}}{\text{Masa maxima a remorcii [kg]} + \text{Masa maxima a masinii[kg]}} \times \frac{9,81}{1000} = D \text{ [kN]}$$

FITTING INSTRUCTION

Clamp mark in acc. with		Cables joining
ISO	PN	
1	L	Left directional lights
2	+	Rear fog lights
3	31	Ground
4	R	Right directional lights
5	58R	Right side parking lights
6	54	Stoplights
7	58L	Left side parking lights

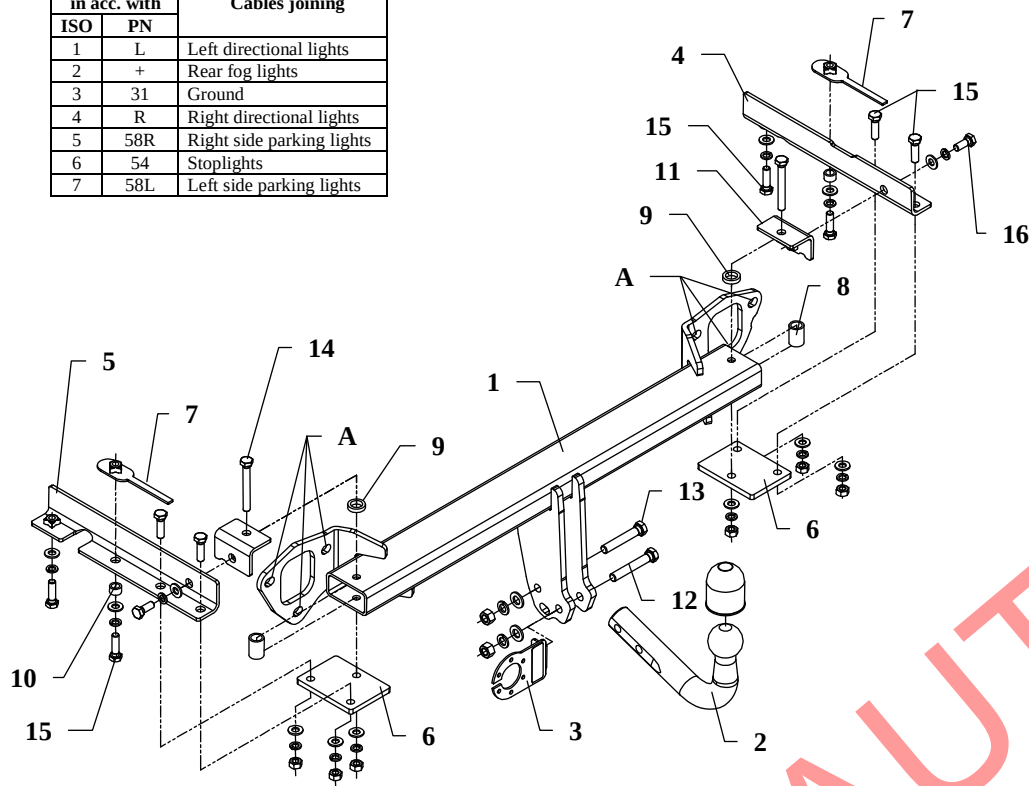

This towing hitch is designed to assembly in following cars:
SUBARU FORESTER, produced since 2008 till 12.2012, catalogue no.
SU45 and is prepared to tow trailers max total weight **2000 kg** and max
 vertical cup mass **80 kg**.

DE PRODUCATOR:

Vă mulțumim pentru achiziționarea produsului nostru. Fiabilitatea acestor produse a fost confirmată în numeroase teste. Fiabilitatea produselor depinde de asemenea și de asamblarea corectă și în ordinea specificată în aceste instrucțiuni. Din acest motive va rugăm să citiți cu atenție instrucțiunile și să le urmați întocmai. Bara de tractare trebuie să fie instalată în punctele descrise de producatorul autovehiculului.

The towing hitch should be install in points described by a car producer.

The instruction of the assembly

1. Disassemble the bumper with the metal reinforcement. The reinforcement will not be assembled again.
2. Fix loosely the main bar of the towing hitch (pos. 1) in places after dismantled reinforcement of the bumper (in points A). Use the original nuts.
3. Fix loosely elements (pos. 6 and 11) to the main bar (pos. 1) using bolts M10x80mm (pos. 14) as showed on the drawing. Use distance sleeves (pos. 8 and 9).
4. Slip side brackets (pos. 4 and 5) to chassis members through large holes of the bar's brackets and fix them from the bottom using bolts M10x35mm (pos. 15). Use distance sleeves (pos. 10) as showed on the drawing.
5. Fix side brackets with elements (pos. 6 and 11) using bolts M10x35mm (pos 15) and M10x25mm (pos. 16) as showed on the drawing.
6. Underneath the bumper, in its axis, cut out the fragment: the width 55mm and depths 80mm.
7. Install the bumper and fix tow ball (pos. 2) using bolt M12x75mm (pos. 12) and M12x70mm (pos. 13). With bolt M12x75mm fix also a socket plate (pos. 3). See figure 1.
8. Tighten all bolts according to the torque shown in the table.
9. Connect electric wires of 7-poles socket according to the instruction of the car. (Recommend to make at authorized service station).
10. Complete paint layer damaged during installation.

Torque settings for nuts and bolts (8,8):

M 8 - 25 Nm **M 10** - 55 Nm
M 12 - 85 Nm **M 14** - 135 Nm

NOTE

After install the towing hitch you should get adequate note in registration book (at authorised service station). The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km of exploitation check all bolts and nuts. The ball of towing hitch must be always kept clear and conserve with a grease.