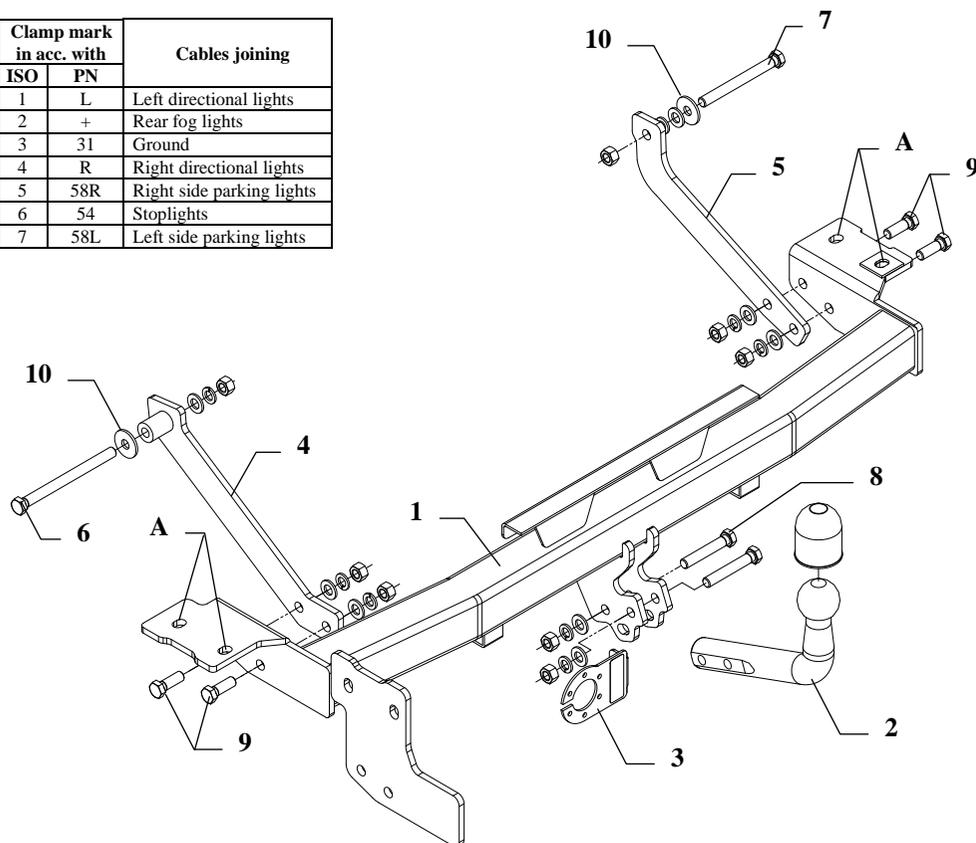


FITTING INSTRUCTION

| Clamp mark in acc. with | | Cables joining |
|-------------------------|-----|---------------------------|
| ISO | PN | |
| 1 | L | Left directional lights |
| 2 | + | Rear fog lights |
| 3 | 31 | Ground |
| 4 | R | Right directional lights |
| 5 | 58R | Right side parking lights |
| 6 | 54 | Stoplights |
| 7 | 58L | Left side parking lights |



The instruction of the assembly

1. Disassemble the bumper and its metal filling.
2. Take out the spare wheel.
3. Apply the main bar of the towbar (pos. 1) to the frame of the car and through holes (pos. A) fix it loosely using bolts remaining after metal fulfillment disassembly.
4. Apply brackets (pos. 4 and 5) as showed on the drawing and fix them using bolts from towbar accessories.
5. Install the bumper.
6. Fix tow-ball (pos. 2) and socket plate (pos. 3) by bolts M12x75mm (pos. 8) from accessories.
7. Tighten all bolts according to the torque shown in the table.
8. Connect electric wires of 7-poles socket according to the instruction of the car. (Recommend to make at authorized service station)
9. Complete paint layer damaged during installation.

Torque settings for nuts and bolts (8,8):

| | | |
|-------------|--------------|--------------|
| M6 - 11 Nm | M8 - 25 Nm | M10 - 50 Nm |
| M12 - 87 Nm | M14 - 138 Nm | M16 - 210 Nm |

This towbar is designed to assembly in following car: **HYUNDAI H200; SATELITE/STAREX (H1) VAN**, produced since 01.1997 till 01.2008, catalogue no. **J15** and is prepared to tow trailers max total weight **2000 kg** and max vertical load **80 kg**.

From manufacturer

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towbar depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

The towbar should be install in points described by a car producer.

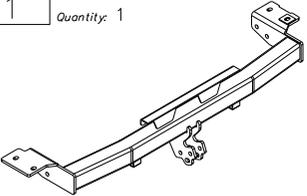
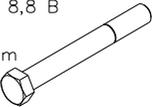
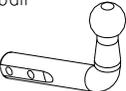
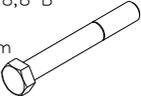
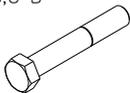
NOTE

After install the towbar you should get adequate note in registration book (at authorised service station).The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km of exploitation check all bolts and nuts. The ball of towbar must be always kept clear and conserve with a grease.

Towbar accessories:

| | | | | | |
|---|-----------------------------------|---|--|--|--|
| Pos. 1 | Name: Main bar Quantity: 1 | Pos. 5 | Name: Right arm Quantity: 1 | Pos. 10 | Name: Washer Quantity: 2 Dim.: $\varnothing 35 \times \varnothing 13 \times 3 \text{mm}$ |
|  | |  | |  | |
| | | Pos. 6 | Name: Bolt 8,8 B Quantity: 1 Dim.: M12x150mm | Pos. 11 | Name: Nut 8 B Quantity: 8 Dim.: M12 |
| | |  | |  | |
| Pos. 2 | Name: Tow ball Quantity: 1 | Pos. 7 | Name: Bolt 8,8 B Quantity: 1 Dim.: M12x120mm | Pos. 12 | Name: Plain washer Quantity: 8 Dim.: $\varnothing 13 \text{ mm}$ |
|  | |  | |  | |
| Pos. 3 | Name: Socket plate Quantity: 1 | Pos. 8 | Name: Bolt 8,8 B Quantity: 2 Dim.: M12x75mm | Pos. 13 | Name: Spring washer Quantity: 8 Dim.: $\varnothing 12,2 \text{ mm}$ |
|  | |  | |  | |
| Pos. 4 | Name: Left arm Quantity: 1 | Pos. 9 | Name: Bolt 8,8 B Quantity: 4 Dim.: M12x35mm | Pos. 14 | Name: Ball cover Quantity: 1 |
|  | |  | |  | |



PPUH AUTO-HAK Sp.J.

Produkcja Zaczepów Kulowych
Henryk i Zbigniew Nejman
76-200 SŁUPSK ul. Słoneczna 16K
tel/fax (059) 8-414-414; 8-414-413
E-mail: office@autohak.com.pl
www.autohak.com.pl

Towing hitch (without electrical set)

Class: **A50-X** Cat. no. **J15**

Designed for:

Manufacturer: **HYUNDAI**

Model: **H200 SATELITE/STAREX**

Type: **(H1) VAN**

produced since 01.1997 till 01.2008

Technical data:

D-value: 12,03 kN

maximum trailer weight: **2000 kg**

maximum vertical cup load: **80 kg**

Approval number according to Directive 94/20/EC: e20*94/20*0572*00

Foreword

This towbar is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch. The vehicle manufacturer's specifications regarding trailer load and max. vertical cup load are decisive for driving, and values for the towing hitch cannot be exceeded.

D-value formula:

$$\frac{\text{Max trailer weight [kg]} \times \text{Max vehicle weight [kg]}}{\text{Max trailer weight [kg]} + \text{Max vehicle weight [kg]}} \times \frac{9,81}{1000} = D \text{ [kN]}$$